



MODEL 570 AUTOMATIC MASTIC AIRLESS SPRAY GUN

6700-0000-7 FOR PROFESSIONAL USE ONLY

WARNING — HIGH PRESSURE — WARNING

MAXIMUM WORKING PRESSURE UP TO 4000 POUNDS PER SQUARE INCH

- DO NOT POINT SPRAY GUN AT ANY PART OF THE HUMAN BODY
- FLUID UNDER HIGH PRESSURE CAN PENETRATE THE SKIN AND CAUSE SEVERE INTERNAL INJURY
 - IN CASE OF INJURY OBTAIN MEDICAL ATTENTION IMMEDIATELY
- BE SURE TO REPORT NATURE OF INJURY AND TYPE OF FLUID OR SOLVENT TO THE DOCTOR

Be sure you understand ALL of the following instructions thoroughly BEFORE operating any part of the airless equipment system. CONSULT YOUR BINKS REPRESENTATIVE TO CLEAR UP ANY ITEMS OF INSTRUCTION YOU DO NOT UNDERSTAND.

1. UNDER NO circumstances should the spray gun be carelessly handled nor its spray (even when the nozzle is removed) directed at close proximity to any part of the human body.
2. DO NOT operate airless spray gun with tip guard housing removed or altered.
3. NEVER clean, change, or remove the nozzle from the spray gun without first doing the following:
 - a. Shut off pump and, in addition, unplug electrical cord or turn off air supply.
 - b. Release fluid pressure in the entire system, from pump or supply line to spray gun.
4. NEVER attempt to force the flow of liquid backward through the gun (blowback) with your finger, hand, or hand-held object pressed against the gun nozzle.
5. NEVER plug a hose leak with your finger, with adhesive tape, or other “stop-gap” device.
6. NEVER operate the airless system with a defective hose. ALWAYS replace the defective hose immediately. For continuing safety, users are urged to:
 - a. ALWAYS handle carefully all hose connections, joints, and seating surfaces on the spray gun to prevent damage.
 - b. NEVER kink or bend the fluid hose into less than a four inch radius.
 - c. FREQUENTLY check the hose for kinks or abrasions. These may develop into a rupture.
 - d. NEVER use standard hardware to modify the airless system. ALWAYS use Binks high pressure fittings only.
7. The airless pump must be grounded before operating the airless spray system.

INSTALLATION AND OPERATING INSTRUCTIONS

Your new Binks 570 Automatic Airless Spray Gun has been thoroughly tested before leaving the factory. No adjustments are required before spray operations begin other than installing the nozzle tip selected. The gun body has four holes which allow the material body to be mounted in any of four positions for convenient fluid hose hookup.

The following steps are recommended for obtaining best results from your spray gun:

1. Install spray gun on gun mount and tighten the set screw (9) securely. **Note:** The mounting hole is 1/2" diameter.
2. Connect air hose to fitting (16). The gun is actuated by air pressure from a 3-way valve. The valve provides air to trigger, shut-off, and exhausts air from the gun. The gun should be limited to 200 cycles per minute (maximum). Approximately 40 to 60 psi air pressure is required to operate the spray gun; however, use the minimum air pressure required.
3. Connect high pressure airless fluid hose to the gun material body assembly (7) and tighten.
4. Remove tip guard assembly (4), nozzle tip, and gasket (3) from spray gun (or remove Twist-Tip if used).

Turn on air supply to operate air valve to spray gun. Turn on material supply very slowly and allow spray gun to trigger a few times to purge any entrapped air in fluid system.

5. Shut fluid supply and air supply OFF.
6. Replace gasket (3), nozzle tip, and tip guard assembly (4) (or Twist-Tip) as per safety procedure described in paragraph 3 above.
7. Turn air and fluid supply ON and check the spray pattern for proper atomization.
8. The spray gun nozzle should be located at such a dis-

NOTE

When the pattern is right, the pressure is right. Excessive fluid pressure will only distort the spray pattern.

tance to the product where maximum fan pattern width is evident. This is usually 8" to 14". The spray pattern may be positioned either vertically or horizontally by rotating nozzle tip (or the Twist-Tip).

continued on pg. 3

| | |
|---------------------------------------|------------------------------|
| Replaces Part Sheet 77-2122R-12 | Part Sheet 77-2122R-13 |
|---------------------------------------|------------------------------|

In this part sheet, the words **WARNING**, **CAUTION** and **NOTE** are used to emphasize important safety information as follows:

⚠ WARNING
 Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

⚠ CAUTION
 Hazards or unsafe practices which could result in minor personal injury, product or property damage.

NOTE
 Important installation, operation or maintenance information.

⚠ WARNING

Read the following warnings before using this equipment.



READ THE MANUAL
 Before operating finishing equipment, read and understand all safety, operation and maintenance information provided in the operation manual.



WEAR SAFETY GLASSES
 Failure to wear safety glasses with side shields could result in serious eye injury or blindness.



DE-ENERGIZE, DEPRESSURIZE, DISCONNECT AND LOCK OUT ALL POWER SOURCES DURING MAINTENANCE
 Failure to De-energize, disconnect and lock out all power supplies before performing equipment maintenance could cause serious injury or death.



OPERATOR TRAINING
 All personnel must be trained before operating finishing equipment.



EQUIPMENT MISUSE HAZARD
 Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in serious injury.



KEEP EQUIPMENT GUARDS IN PLACE
 Do not operate the equipment if the safety devices have been removed.



HIGH PRESSURE CONSIDERATION
 High pressure can cause serious injury. Relieve all pressure before servicing. Spray from the spray gun, hose leaks, or ruptured components can inject fluid into your body and cause extremely serious injury.



GET IMMEDIATE MEDICAL ATTENTION
 To prevent contact with the fluid, please note the following:
 a) Never point the gun/valve at anyone or any part of the body.
 b) Never put hand or fingers over the spray tip.
 c) Never attempt to stop or deflect fluid leaks with your hand, body, glove or rag.
 d) Always have the tip guard on the spray gun before spraying.
 e) Always ensure that the gun trigger safety operates before spraying.
 f) Always lock the gun trigger safety when you stop spraying.



PRESSURE RELIEF PROCEDURE
 Always follow the pressure relief procedure in the equipment instruction manual.



MEDICAL ALERT
 Any injury caused by high pressure liquid can be serious. If you are injured or even suspect an injury:
 a) Go to an emergency room immediately.
 b) Tell the doctor you suspect an injection injury.
 c) Show the doctor this medical information or the medical alert card provided with your airless spray equipment.
 d) Tell the doctor what kind of fluid you were spraying or dispensing.
 e) Refer to the Material Safety Data Sheet for specific information.



TOXIC FLUID & FUMES
 Hazardous fluid or toxic fumes can cause serious injury or death if splashed in the eyes or on the skin, inhaled, injected or swallowed. LEARN and KNOW the specific hazards or the fluids you are using.



WEAR RESPIRATOR
 Toxic fumes can cause serious injury or death if inhaled. Wear a respirator as recommended by the fluid and solvent manufacturer's Material Safety Data Sheet.



ELECTRIC SHOCK / GROUNDING
 Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.



PROJECTILE HAZARD
 You may be injured by venting liquids or gases that are released under pressure, or flying debris.



FIRE AND EXPLOSION HAZARD
 Improper equipment grounding, poor ventilation, open flame or sparks can cause hazardous conditions and result in fire or explosion and serious injury.



STATIC CHARGE
 Fluid may develop a static charge that must be dissipated through proper grounding of the equipment, objects to be sprayed and all other electrically conductive objects in the dispensing area. Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.





PROP 65 WARNING
 WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PROVIDE THIS INFORMATION TO THE OPERATOR OF THE EQUIPMENT.

FOR FURTHER SAFETY INFORMATION REGARDING BINKS AND DEVILBISS EQUIPMENT, SEE THE GENERAL EQUIPMENT SAFETY BOOKLET (77-5300).

Binks MODEL 570 AUTOMATIC MASTIC AIRLESS SPRAY GUN

9. "Hour glass" or "tails" on the spray pattern normally indicates too low a fluid pressure for the nozzle tip being used; or, the material is too viscous.
10. A distorted spray pattern usually means a plugged or worn nozzle tip.
11. Using excessive fluid pressure will only cause undue wear of the nozzle tip.

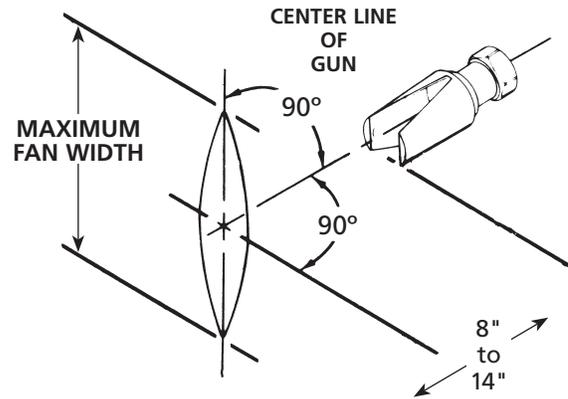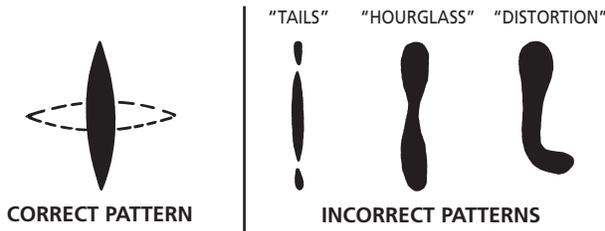

MAINTENANCE INSTRUCTIONS (See High Pressure Warning Statement on Page 1)

To Clean Nozzle Tip:

1. BEFORE proceeding with any maintenance, read safety procedure, paragraph 3, in High Pressure Warning, page 1.
2. Remove tip guard assembly (4), nozzle tip, and gasket (3).
3. Submerge nozzle tip in solvent to remove dried material.
4. Blow air through nozzle tip to clean.
5. Airless spray nozzle Tips are made of tungsten carbide and are very brittle. Do not drop. To clean a nozzle tip use solvent, toothpick or sharpened match. Never use a metal probe.

To Replace Wire Assembly:

1. BEFORE proceeding with any maintenance, read safety procedure, paragraph 3, in High Pressure Warning, page 1.
2. For convenience, you may wish to remove spray gun from gun mount.

3. Carefully remove the cap (10). The spring (13) is under tension and will come out when cap (10) is removed.
4. Remove nut (14) and lockwasher (15). The back plate (12), diaphragm (11) and washer (17) may be removed at this time.
5. Loosen the wire assembly nut (6) from the stem (20).
6. Loosen and remove the bearing screw assembly (19) and the stem (20) from spray gun. The packing (18) should also be inspected at this time. If worn, replace.
7. Loosen and remove the gland nut (21). The wire assembly (6) may now be pulled rearward from the spray gun.
8. If worn, replace the gland set (22).
9. The material body assembly (7) may be removed for cleaning by loosening set screws (1). Note the pin in gun body assembly (8).
10. Reassemble in reverse order.

DIFFUSER ASSEMBLIES*

Reduces fluid velocity to minimize tip wear and to aid fluid filtration. 54-2229 nylon gasket is included with 54-2378.

54-2378 nut for use with 54-1835 (.005) or 54-1836 (.009) edge type filter.




54-1640 54-1639 54-2378 54-1835
54-1797 54-1836

*Not furnished.
Please order separately.

NOTE
Warning information stamped on nut.

NOZZLE TIP not furnished. Please order separately. See page 5 for selections.

NOTE
Keep gland nut (21) tight at all times. Should leak occur at gland nut (21), replace gland set (22). Wire assembly (6) will be damaged if leak persists.

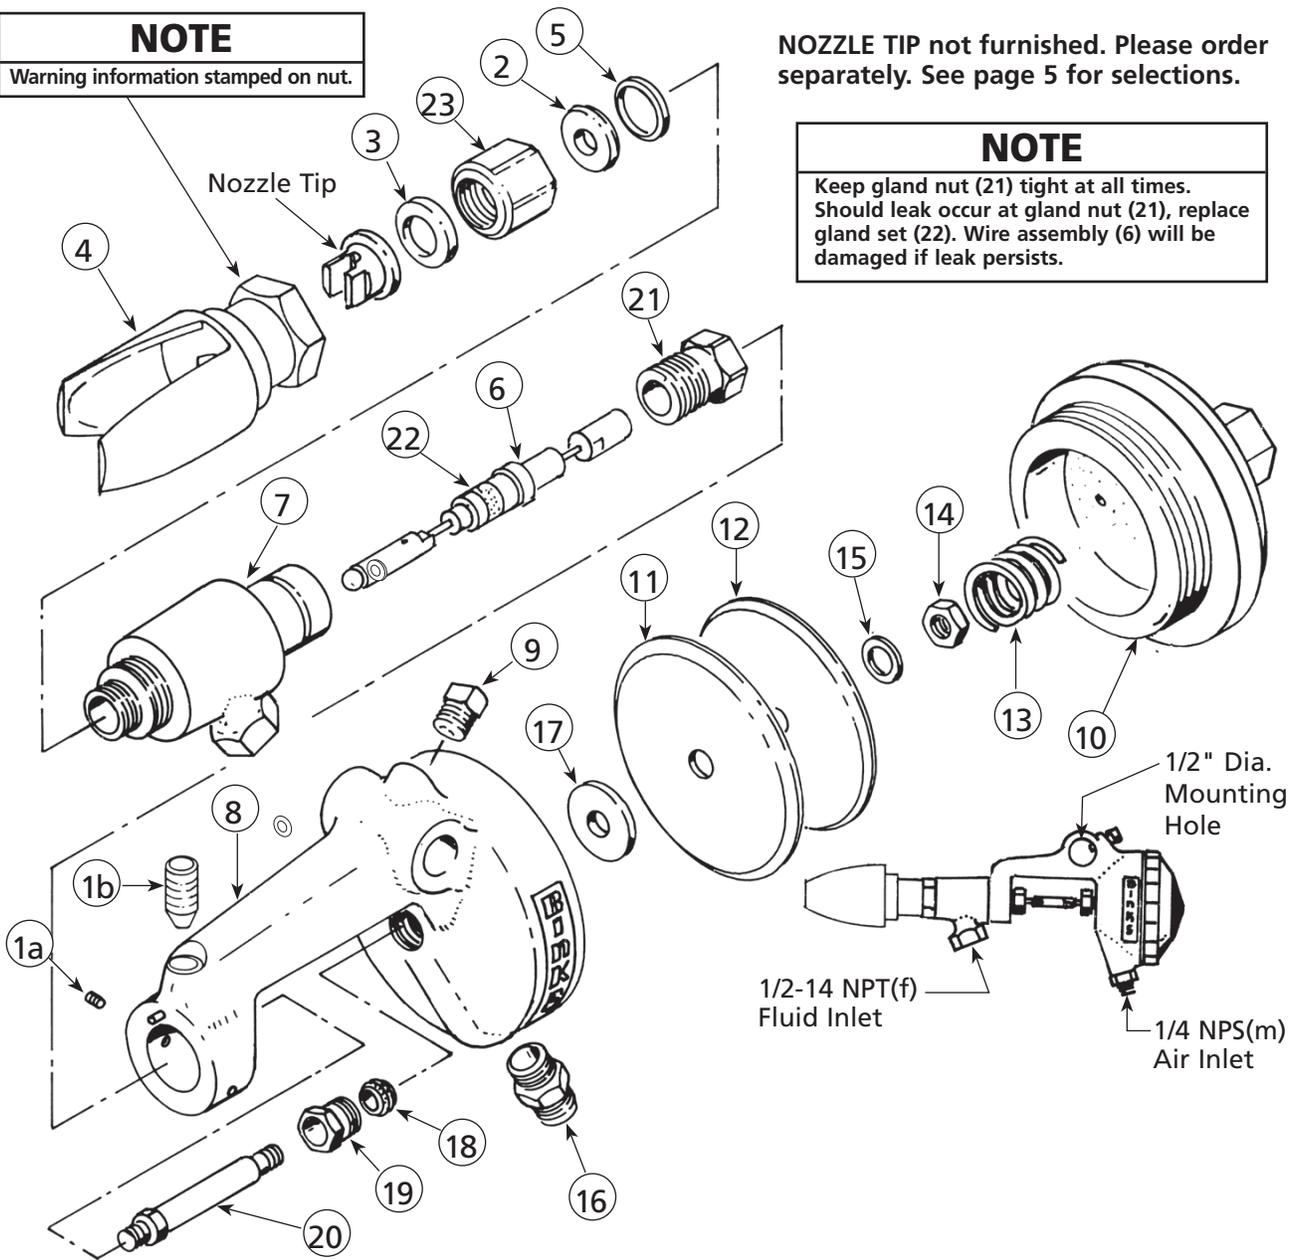

PARTS LIST

(When ordering, please specify Part No.)

| ITEM NO. | PART NO. | DESCRIPTION | QTY. | ITEM NO. | PART NO. | DESCRIPTION | QTY. |
|----------|----------|---|------|----------|----------|--------------------------------|------|
| 1a | — | SET SCREW 1/4-20 x 3/16" Long..... | 2 | 11 | 54-3051† | DIAPHRAGM | 1 |
| 1b | — | SET SCREW 1/4-20 x 1/2" Long, with Nylock..... | 1 | 12 | 54-3054 | BACK PLATE | 1 |
| 2 | 54-2929† | SEAT..... | 1 | 13 | 54-3052† | SPRING..... | 1 |
| 3 | 54-2229† | GASKET | 1 | 14 | — | NUT 8/32 | 1 |
| 4 | 54-3085 | TIP GUARD ASSEMBLY | 1 | 15 | — | LOCKWASHER | 1 |
| 5 | 54-2927† | SEAL..... | 1 | 16 | 71-28 | FITTING 1/8 NPT x 1/4 NPS..... | 1 |
| 6 | 54-2955† | WIRE ASSEMBLY..... | 1 | 17 | 54-3055 | WASHER | 1 |
| 7 | 54-3048 | MATERIAL BODY ASSEMBLY..... | 1 | 18 | 54-3053† | PACKING..... | 1 |
| 8 | — | GUN BODY ASSEMBLY | 1 | 19 | 54-3059 | BEARING SCREW ASSEMBLY..... | 1 |
| 9 | 20-1359 | SET SCREW 5/16-18 x 5/8" Long..... | 1 | 20 | 54-3061 | STEM..... | 1 |
| 10 | 54-3060 | CAP ASSEMBLY | 1 | 21 | 54-2964 | GLAND NUT | 1 |
| | | | | 22 | 54-2949* | GLAND SET..... | 1 |
| | | | | 23 | 54-2928 | SET CAP | 1 |

† Also available in 54-3122 Repair Kit. Please order separately.

* Furnished with Wire Assembly (6).

BINKS TWIST-TIP REVERSIBLE NOZZLE CLEANER

GENERAL

The Twist-Tip nozzle cleaner allows purging of a clogged nozzle orifice without disassembly from the spray gun. The tungsten carbide nozzle is permanently assembled into the rotatable cylinder tip insert and handle assembly. No alignment or adjustments are required.

ASSEMBLY


Assembly to spray gun is simple and the exploded view is self-explanatory. The 54-2378 diffuser assembly is required to assemble the Twist-Tip into the gun.

FEATURES OF THE TWIST-TIP ATTACHMENT

- Fits most popular airless spray guns
- Low friction turning
- Equals or exceeds life of other reversible spray tips
- Hand-tightened seal system
- Assembly suitable for solvent and water-based
- Maximum working pressure: 7,500 PSI
- Rapid changing of the tip and base by hand without tools

IMPORTANT OPERATING INSTRUCTIONS

1. The spray gun must be shut off while rotating the Twist-Tip attachment handle.
2. If leakage occurs, unit must be disassembled, cleaned and parts checked for any damage. Replace damaged parts with genuine Binks parts.

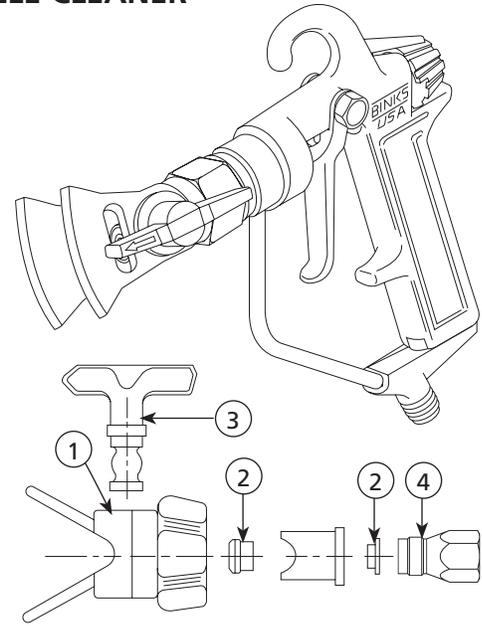

PARTS LIST

When ordering, please specify Part No.

| ITEM NO. | PART NO. | DESCRIPTION | QTY. |
|----------|--------------|---|------|
| 1 | 454-3 | SAFETY GUARD ASM..... | 1 |
| 1 | 454-5 | SAFETY GUARD (G Thread) ASM ... | 1 |
| 2 | 454-1 | SEAL KIT ASSEMBLY (Part of Safety Guard) | 1 |
| 3 | 454-Tip Size | SPRAY TIP | 1 |
| 4 | 54-2378 | DIFFUSER | 1 |

⚠ WARNING

Do not operate unit with leakage from the spray gun, Twist-Tip attachment or hose or severe injury may result.

3. With proper care, the Twist-Tip attachment will give long, reliable service. To maintain this performance, it should be flushed with solvent or proper cleaning fluid following each spray period.

AIRLESS TWIST TIP CHART

| SURFACE | COATING | FAN WIDTH (in inches) | ORIFICE SIZE | | | | | | | |
|--|---|--------------------------|--------------|------|------|------|------|------|------|------|
| | | | .009 | .011 | .013 | .015 | .017 | .019 | .021 | .023 |
| Wood Interior Cabinets, Paneling | Stain, Sanding Sealer, Lacquer Varnish, Shellac, Enamels | 6" | 309 | 311 | 313 | - | - | - | - | - |
| Interior Walls Ceilings, Drywall Plaster | Latex, Vinyl Acrylic | 10" | - | - | - | 515 | 517 | 519 | - | - |
| | | 12" | - | - | - | 615 | 617 | - | - | - |
| Overhang | Primers, Enamels | 10" | - | - | - | 515 | 517 | - | - | - |
| Masonry Block, Stucco, Concrete | Vinyl, Acrylic Latex, Oil Base, Alkyds | 10" | - | - | - | - | 517 | 519 | 521 | - |
| Wood Exterior Shingle Siding, Shiplap | Exterior, Stains Latex, Vinyl, Acrylic | 10" | - | - | - | - | 517 | 519 | 521 | - |
| Open Joist Ceiling Areas | MIL White HI Build | 10" | - | - | - | - | - | 519 | - | - |
| | | 12" | - | - | - | - | - | - | 521 | 523 |

BASE RETAINERS

| Assembly Number | 454-3 3/4 – 20 | 454-5 7/8 – 14 (G) |
|-----------------|-------------------|-----------------------|
| | Binks | Graco, Titan, Wagner |

Ordering: For twist tips add the prefix 454- to size tip selected. For example, if you select 517, order as 454-517.

FLAT TIP ASSEMBLIES FOR AIRLESS GUNS

| PART NUMBER | STAMPED NUMBER | ORIFICE (INCHES) | FAN WIDTH (12" FROM SURFACE) | PART NUMBER | STAMPED NUMBER | ORIFICE (INCHES) | FAN WIDTH (12" FROM SURFACE) | PART NUMBER | STAMPED NUMBER | ORIFICE (INCHES) | FAN WIDTH (12" FROM SURFACE) |
|-------------|----------------|------------------|------------------------------|-------------|----------------|------------------|------------------------------|-------------|----------------|------------------|------------------------------|
| 9-1170 | 9-1170 | .011 | 8-10 | 9-2140 | 9-2140 | .021 | 10-12 | 9-3620 | 9-3620 | .036 | 6-8 |
| 9-1180 | 9-1180 | .011 | 10-12 | 9-2180 | 9-2180 | .021 | 16-18 | 9-3640 | 9-3640 | .036 | 12-14 |
| 9-1350 | 9-1350 | .013 | 8-10 | 9-2190 | 9-2190 | .021 | 18-20 | 9-3660 | 9-3660 | .036 | 16-18 |
| 9-1360 | 9-1360 | .013 | 10-12 | 9-2340 | 9-2340 | .023 | 10-12 | 9-3680 | 9-3680 | .036 | 18-20 |
| 9-1380 | 9-1380 | .013 | 12-14 | 9-2640 | 9-2640 | .026 | 12-14 | 9-4340 | 9-4340 | .043 | 12-14 |
| 9-1550 | 9-1550 | .015 | 8-10 | 9-3120 | 9-3120 | .031 | 6-8 | 9-4380 | 9-4380 | .043 | 18-20 |
| 9-1560 | 9-1560 | .015 | 10-12 | 9-3140 | 9-3140 | .031 | 12-14 | 9-5230 | 9-5230 | .052 | 8-10 |
| 9-1590 | 9-1590 | .015 | 14-16 | 9-3180 | 9-3180 | .031 | 18-20 | 9-5240 | 9-5240 | .052 | 12-14 |
| 9-1840 | 9-1840 | .018 | 10-12 | | | | | 9-6230 | 9-6230 | .062 | 8-10 |
| 9-1860 | 9-1860 | .018 | 12-14 | | | | | | | | |
| 9-1890 | 9-1890 | .018 | 16-18 | | | | | | | | |

NOTES

WARRANTY

This product is covered by Binks' 1 Year Limited Warranty.

Binks Sales and Service: www.binks.com



U.S.A./Canada Customer
Service
195 Internationale Blvd.
Glendale Heights, IL 60139
630-237-5000

Toll Free Customer Service
and Technical Support
800-992-4657
Toll Free Fax
888-246-5732

77-2122R-13 Revisions: (P8) Updated contact information.